

## **MUST READ before 1<sup>st</sup> time Use – Flash Disk**

**\* For ALL user – DO NOT Format Flash Disk with FAT32 formatting (Windows XP Default formatting) it will damaged Flash Disk and caused it to be unstable. Please use only FAT (or FAT16) formatting or Format from your utilities drivers (please refer below)**

For Windows ME user –

- 1) Please do NOT download any utilities program
- 2) Please check with your dealer for Utilities Program via email

For Windows 98SE, 2000 and XP user –

- 1) Must check the type of Controller in your Flash Disk for Utilities program installation
- 2) For Windows XP –
  - a. Plug in your Flash Disk and wait for system to install and ready
  - b. Double-click “My Computer” then right click “Removable Disk” (your Flash Disk) and click “Properties”
  - c. Click to “Hardware” page
  - d. Under “All Disk Drives” locate the type of controller in your Flash Disk –
    - i. Chipsbnk Flash Disk USB Device or USB Flash Disk USB Device or
    - ii. Generic USB Flash Drive USB Device
- 3) For Windows 2000 –
  - e. Plug in your Flash Disk and wait for system to install and ready
  - f. Double-click the “Unplug or Eject Hardware” icon in system tray
  - g. Under “Stop a Hardware device” page locate the type of driver of your Flash Disk –
    - i. Chipsbnk Flash Disk USB Device or USB Flash Disk USB Device or
    - ii. Generic USB Flash Drive USB Device
- 4) IF **Chipsbnk Flash Disk USB Device or USB Flash Disk USB Device**, please download and install **Password Manager for Chipsbank Controller**
- 5) IF **Generic USB Flash Drive USB Device**, please download and install **iFormat2 for Generic Controller**

Please note that incorrect program installed will NOT effect your Flash Disk, only not able to access the utilities functions.

Any further question or enquiry, please contact your dealer.